

Set-up Reference Sheet

KITCHENjet™ 1000 Inkjet Printer

Additional product information is available on our web site at www.ithacaprinters.com.


Step 1 - Unpack Printer

The following items are packed in the box. If any items appear to have shipping damage, contact our Sales Department.

- KITCHENjet™ 1000 Printer
- Ink Cartridge(s)
- Paper Roll (located under the paper cover)
- PowerPocket® Power Supply (optional)(located in cabinetry base)
- AC Power Cord (optional)

Step 2 - Connect Communication Cable and Power Cord


1. Connect communication cable to the appropriate connector on the back of the printer.

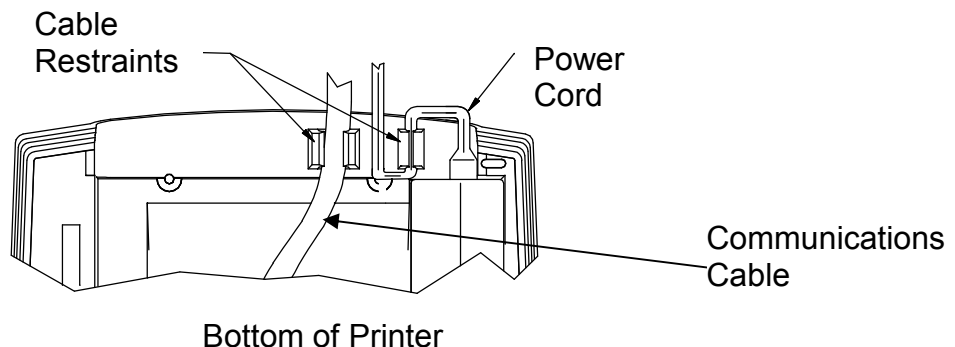

2. Connect the power cord to the power supply on the back of printer.
If power is provided by host, plug the cord directly into the printer's power connector.
3. Route the power cord as shown in the above drawing so that the cable restraints will protect against accidental unplugging of the printer.


Step 3 - Install Ink Cartridge(s)

Caution: Do not touch the ink cartridge's metallic connector area with your fingers, this will result in cartridge contamination.

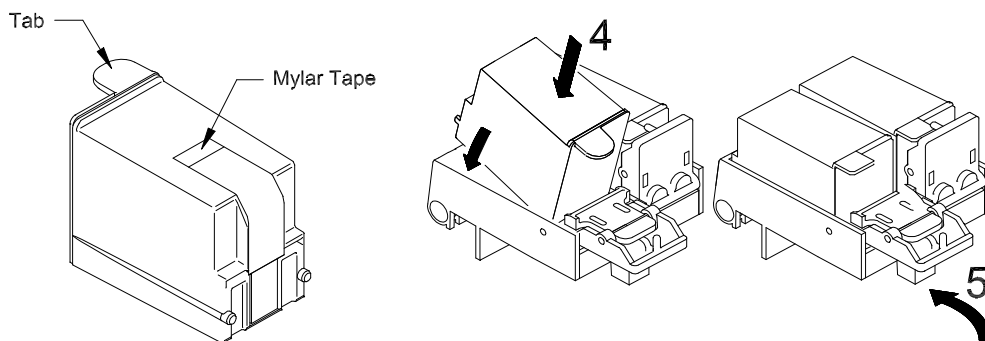

1. The printer should be turned ON by using the power button before you install ink cartridges. Confirm that the printer is ON by checking that the power indicator light is activated.
2. Remove ink cartridge from sealed pouch. Hold cartridge by tab to avoid contamination. Remove Mylar tape.
3. Open the front cover of the printer to access the carriage. Pull down (release) the blue cartridge latch.
4. Place the ink cartridge into the carriage by holding the tab to ensure clean installation. The primary color (usually Black) goes into the left carriage position.
5. Close (engage) the blue latch and close both printer covers.

Step 4 – Loading a New Paper Roll

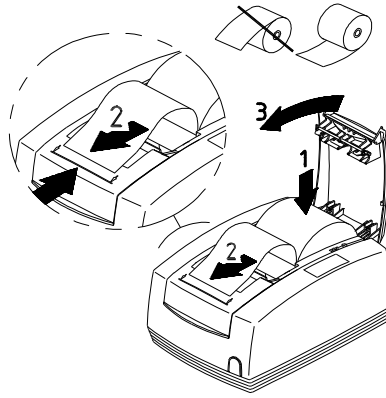

1. Open the rear cover. Insert the new paper roll so that the paper unwinds from the bottom of the roll.
2. Pull leading edge of paper forward, making sure it is aligned to the line on the front cover and that it does not extend beyond the line.
3. Close the rear cover on the paper. The Insta-Load® feature will automatically complete the loading process.

Step 5 - Configure Firmware

Included with your printer is a configuration printout that shows how the printer was configured when it was shipped from our Ithaca Facility. Compare this information to your system requirements. Pay attention to the emulation and the communications link. If they are incorrect, the printer may appear inoperative. If you are unsure of the settings your system requires, try printing to the printer before modifying the configuration.

Quick Configuration

The Quick Configuration allows you to quickly change the printer's settings to the Ithaca default or Epson default.

1. Remove power from the printer via the power cable.
2. Hold the FEED button down and apply power to the printer.
3. When the red Error LED begins to blink steady, release the FEED button.
4. Follow the instructions at the end of the printout.






Configuration Mode

Use **only** if you need to change individual settings in the configuration.

1. Remove power from the printer via the power cable.
2. Hold the FEED and NEW CARTRIDGE buttons down and apply power to the printer.
3. When the red Error LED begins to blink steady, release the FEED and NEW CARTRIDGE buttons.
4. Follow the instructions at the end of the printout.

Step 6 - Setup is Now Complete

Troubleshooting

General problems: Use this table to determine problem type					
Error Type	Power LED 	Error LED 	Paper LED 	Left Cartridge 	Right Cartridge 
Cover Open	ON	ON	OFF	OFF	OFF
Out of Paper	ON	ON	ON	OFF	OFF
Paper Low	ON	OFF	Blinking	OFF	OFF
Right Cartridge Low	ON	OFF	OFF	OFF	1 Blink
Left Cartridge Low	ON	OFF	OFF	1 Blink	OFF
Both Cartridges Low	ON	OFF	OFF	1 Blink	1 Blink
Left Cartridge Removed	ON	ON	OFF	ON	OFF
Right Cartridge Removed	ON	ON	OFF	OFF	ON
Paper Jam	3 Blinks	ON	OFF	OFF	OFF

Where To Reach Us

TransAct Technologies, Inc.
 Ithaca Facility
 20 Bomax Drive
 Ithaca, New York 14850
 1.877.7ithaca (1.877.748.4222)
 Fax: 607.257.3868
 Monday through Friday, 8 a.m. to 5 p.m. est
 www.ithacaprinters.com

TransAct Technologies, Ltd.
 7 Wood View
 Broomhouse Lane Industrial Estate
 Edlington, Doncaster DN12 1EQ
 United Kingdom
 Phone: ++44 (0) 1709.772500
 Fax: ++44 (0) 1709.772505
 Monday though Friday 8 a.m. to 5 p.m. gmt

ithaca[®]
a product of TRANSACT
KITCHENjet™ 1000